




UTRED30-WIFI

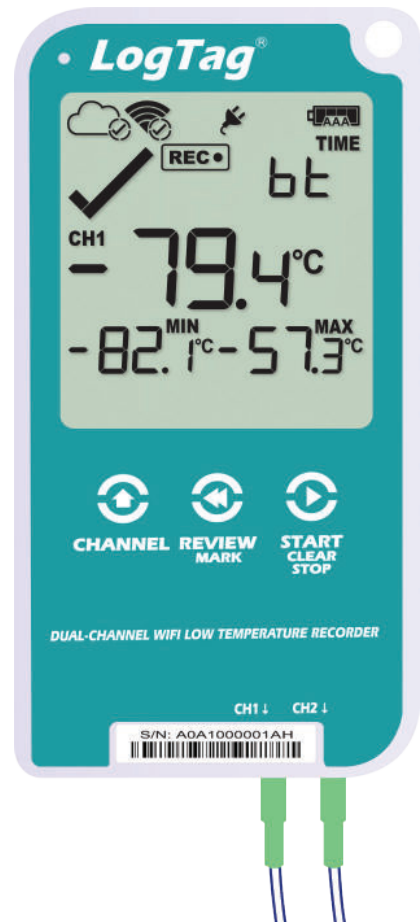

UTREL30-WIFI

# LogTag<sup>®</sup>

## Bluetooth<sup>®</sup> Configuration Guide

Version B - August 2022

[www.logtag.com](http://www.logtag.com)

# Registering the Device

---

The LogTag Mobile application allows users access to LogTag Online using a mobile device. Through Bluetooth® capabilities the application allows your device to be connected to the network and be remotely configured. Profile and timezone can be configured remotely for the logger.

For more information or alternative configuration methods refer to your Wi-Fi loggers quick start guide or user manual on their product pages.

## Downloading the LogTag Mobile Application

1. Navigate to either the App Store or Google Play store within your mobile device.
2. Search for the LogTag Mobile application.
3. Download the latest LogTag Mobile application.




4. Launch the application and follow the sign in process.


Ensure your device is either plugged in to your computer or an AC adapter using the USB cable provided.

**Note:** Allow all permissions for the applications use of location, Bluetooth® and camera.

# Registering the Device (Continued)

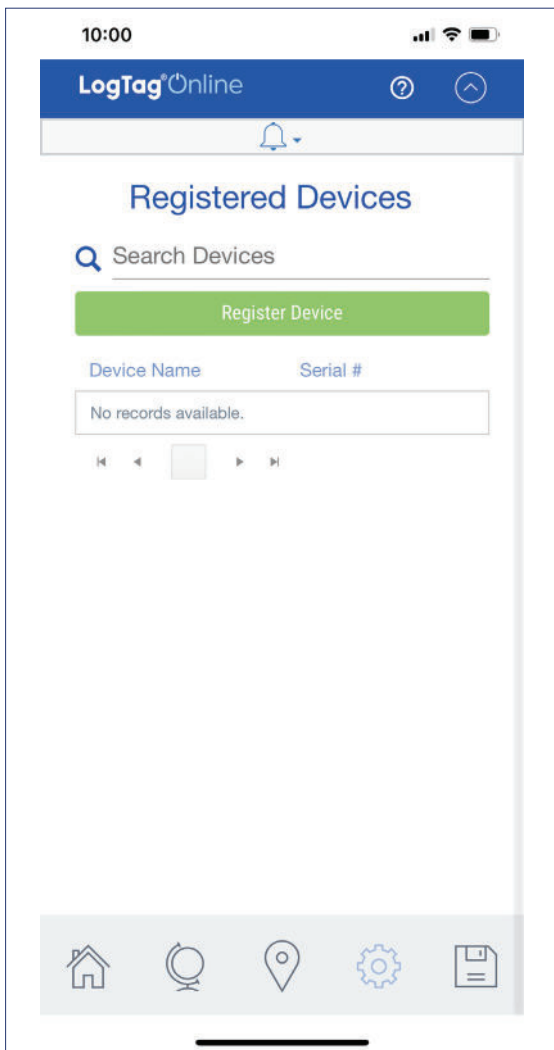


Ensure you have a location slot available on your LogTag Online account.

5. Navigate to the devices tab  and select 'Register Device'.

6. Scan or enter the barcode of your LogTag logger, then select Next.

**Note:** Hold the CHANNEL FUNCTION button to activate Bluetooth® if 'bt' does not show.

# Registering the Device (Continued)

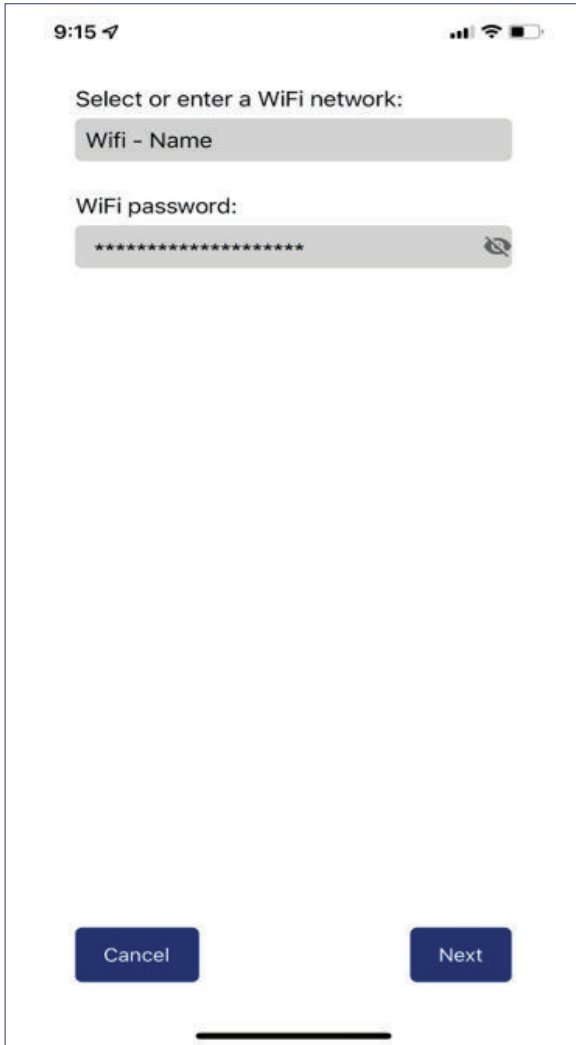

9:15

Select or enter a WiFi network:


Wifi - Name

WiFi password:

\*\*\*\*\*

Cancel Next

This screenshot shows a mobile application interface for selecting a WiFi network. At the top, the time is 9:15. Below the title 'Select or enter a WiFi network:', there are two input fields: 'Wifi - Name' and 'WiFi password:'. The password field is filled with asterisks and has an eye icon to its right. At the bottom, there are two blue buttons: 'Cancel' on the left and 'Next' on the right.

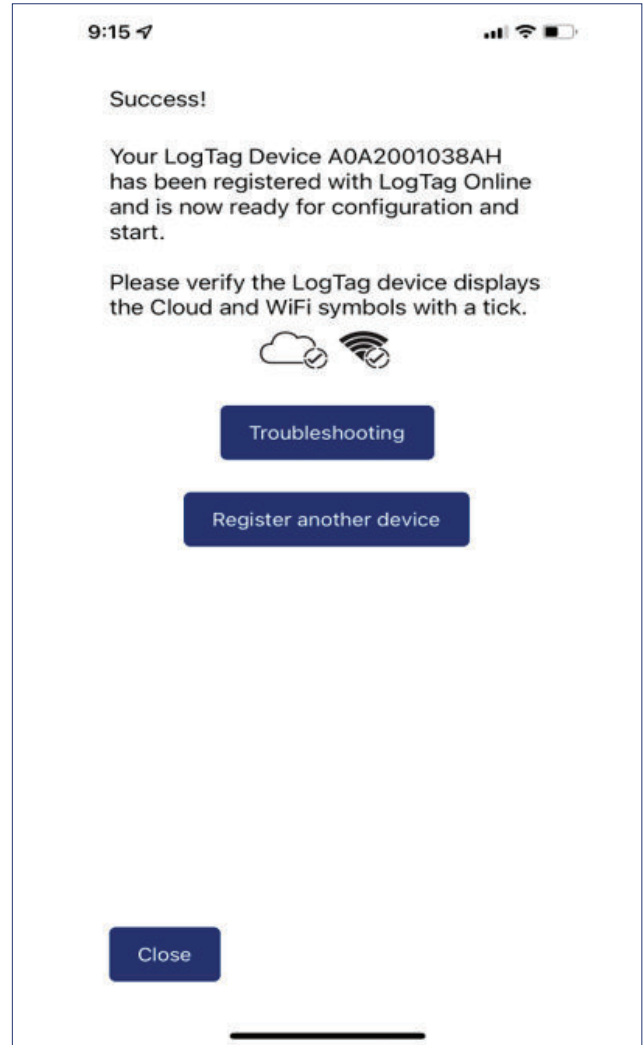

9:15

Success!

Your LogTag Device A0A2001038AH has been registered with LogTag Online and is now ready for configuration and start.

Please verify the LogTag device displays the Cloud and WiFi symbols with a tick.

Troubleshooting

Register another device

Close

This screenshot shows a success message. At the top, the time is 9:15. Below the title 'Success!', there is a message: 'Your LogTag Device A0A2001038AH has been registered with LogTag Online and is now ready for configuration and start.' Below this, there is a sub-message: 'Please verify the LogTag device displays the Cloud and WiFi symbols with a tick.' There are two icons: a cloud with a checkmark and a WiFi symbol with a checkmark. Below the icons are two blue buttons: 'Troubleshooting' and 'Register another device'. At the bottom, there is a blue button labeled 'Close'.

7. Connect your device to the network by entering or selecting your Wi-Fi network name and providing the network password, then select 'Next'.

**Note:** Ensure the Wi-Fi password is correct. To view the password select the eye icon.

8. Your device will connect to your local network using your provided Wi-Fi credentials, once completed select 'Close'.

Select 'Troubleshooting' if you are experiencing issues.